


# Uninstalling Creative Audio Drivers


Keywords / Key Phrases: uninstalling creative audio driver, creative driver update utility, to uninstall the driver, removing the driver

To properly uninstall Creative Audio Drivers, do the following:


1. Insert the installation CD into the CD/DVD-ROM drive.
2. Launch the setup.exe file from the following directory: [CD/DVD Drive:]\Audio\Drivers\Setup.exe
3. Select **Driver Uninstallation** and **Delete all shared Creative audio driver files** then click **OK**.

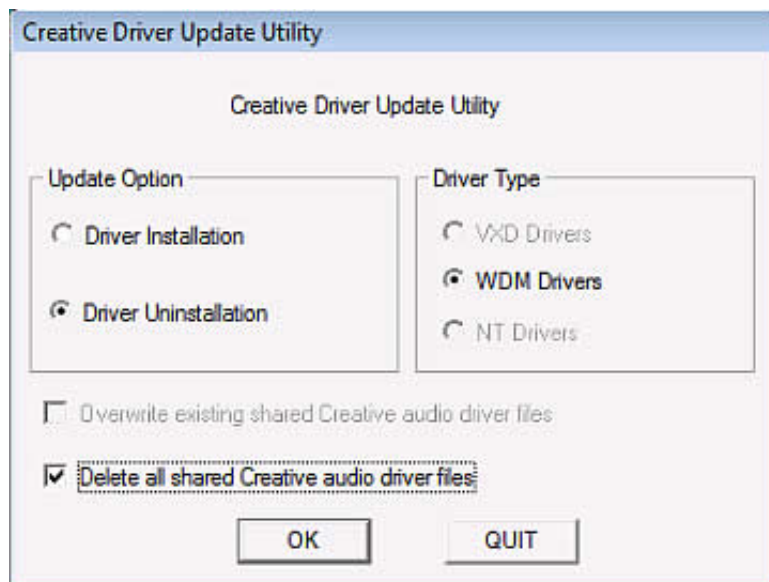


4. Click **Yes** to continue.

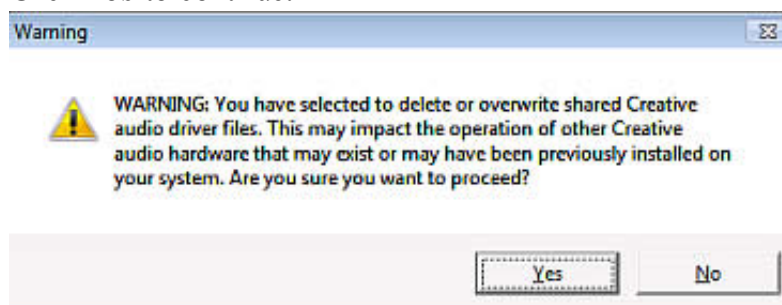


5. Click **OK** to continue.

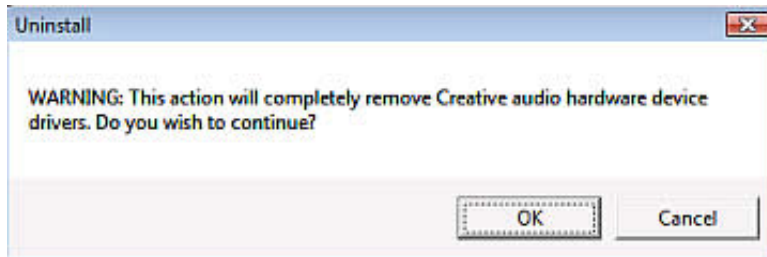

6. You will see the uninstallation progress window.

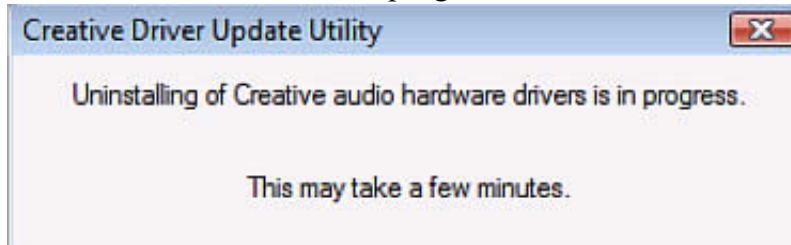


7. Click **OK** to reboot the system.

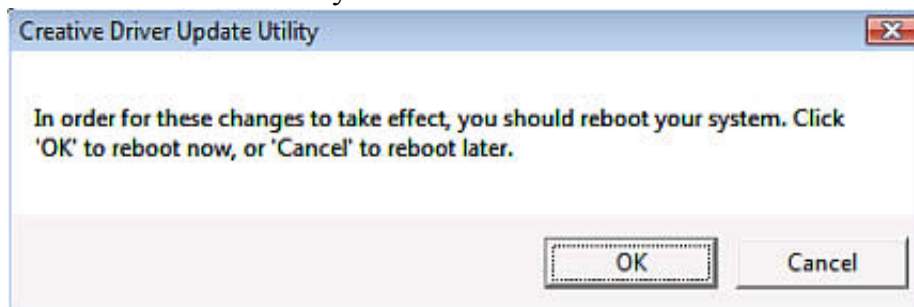

8. Check Device Manager to ensure that the audio drivers have been successfully uninstalled.

For X-Fi Titanium series soundcards, once the drivers are uninstalled from the system, the soundcard will be detected as **High Definition Audio Device** in the device manager as shown below:

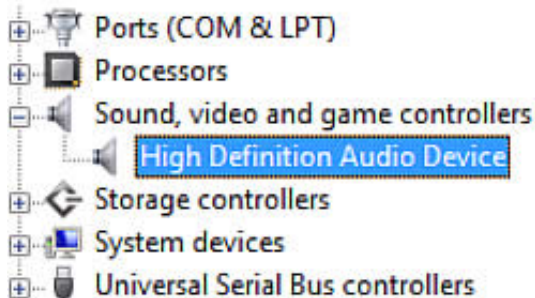

For X-Fi series soundcards, once the drivers are uninstalled from the system, the

soundcard will be detected as **Multimedia Audio Controller** in the device as shown below:



Last updated: February 22, 2010